



Airtec Tube for Compressed Breathing

■ Measurement procedure: (a case of contaminant test in cylinder)

1. Install a pressure reducer with gauge and flow metre to a cylinder, compressor or air line and adjust the flow metre the required setting.
2. Break tips off a fresh detector tube in the tube tip breaker and insert a tube into a tube holder.

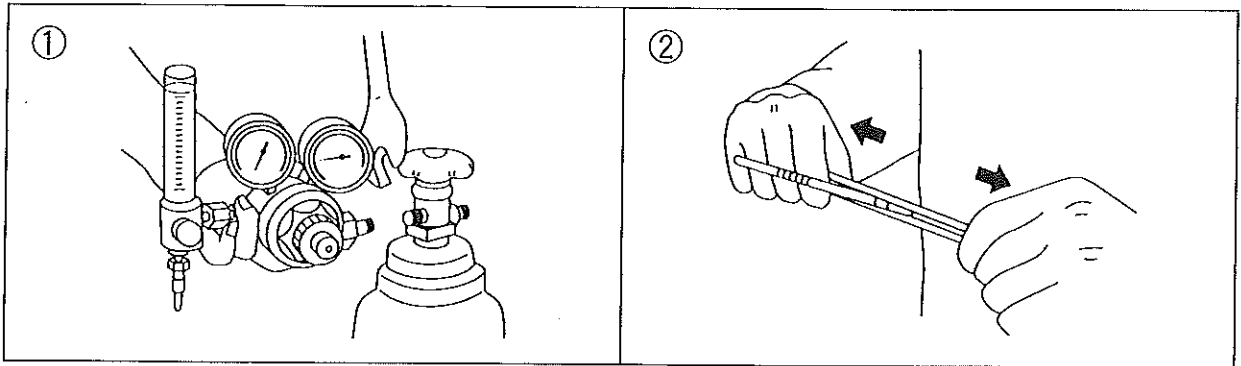

3. Attach the rubber tube holder to the flow metre outlet. Make certain the tube arrow **G** on the tube pointing in a down direction.
4. Turn on the cylinder or compressor and confirm the flow metre according to each Airtec tube specifications.
5. Time the sampling time with a stopwatch.

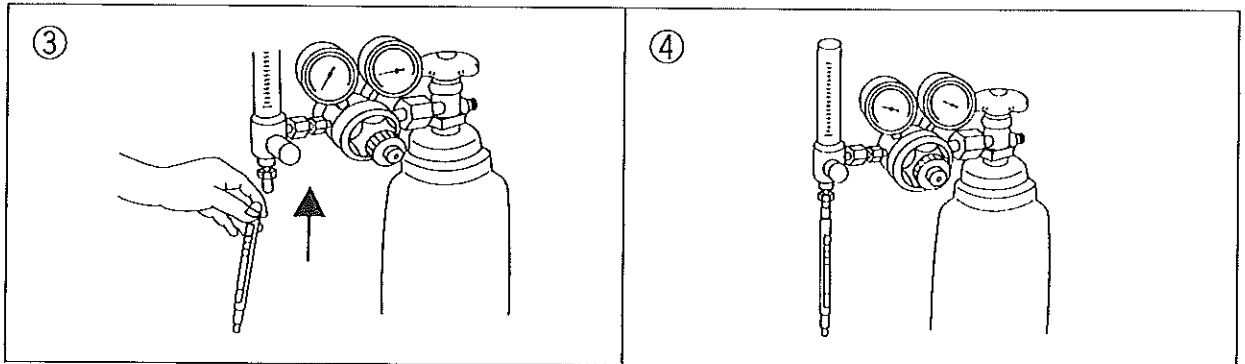

6. As soon as sampling time has elapsed turn off the cylinder or compressor, and remove the tube from the tube holder and then read colour change layer immediately.

