


# Simple and accurate measurements with the Gastec Standard Detector Tube System

## 1. Preparation

- ① Select a detector tube ( a single tube or a twin tube ) to be used.
- ② Break off the both ends of the detector tube (in case of a twin tube, break off the both ends of the two tubes ) by using the built-in tube tip breaker or an optional No.722 Tube Tip Holder.
- ③ Confirm the pump handle is fully pushed in. Then insert the detector tube into the rubber inlet of the Model GV-100 Gas Sampling Pump with arrow ( ▶ ) on the tube pointing toward the pump.

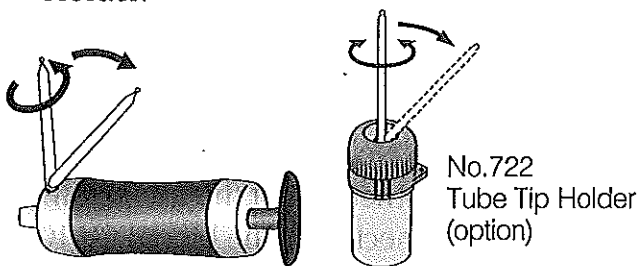

In case of a twin tube connect the © marked ends of the two tubes by the rubber connector provided.

