

GASTEC Instructions for No.2D Carbon Dioxide Passive Dosi-Tube

FOR SAFE OPERATION :

Read this manual carefully before use.

⚠ CAUTION : If not observed, injuries to the operator or damage to the product may result.

1. When breaking the Passive Dosi-Tube, keep away from eyes
2. Do not touch the broken glass tubes, pieces and reagent with bare hand(s).
3. Keep tubes out of Direct Sunlight. The sunlight fades the discoloration of the tube.

△ NOTES : For maintaining performance and reliability of the test result


1. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
2. Use this tube within the relative humidity range of 0 - 90%.
3. This tube may be interfered by the coexisting gases. Please refer to the "INTERFERENCES".
4. Shelf life and storage conditions of the Passive dosi-tube are marked on the label of the box of tube.

APPLICATION OF THE TUBE :

Use this tube for the detection of Carbon Dioxide in air or the industrial areas and environmental atmospheric condition.

SPECIFICATION :

(As a result of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

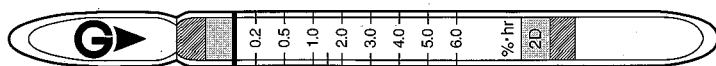

Detecting Agent

Measuring Range	0.02 - 12 %
Sampling Time	0.5 - 10 hours
Detecting Limit	0.02 % (10 hours)
Color Change	Orange → Yellow
Reaction Principle	Carbon Dioxide neutralizes analyzing agent to produce yellow stain.

**** Shelf Life : Please refer to the Validity Date printed on the box of tube.**

**** Store the tubes in dark and cool place.**

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :


Temperature : For tube temperature other than 20°C, tube reading must be corrected the tube reading according to the correction factor below:

Temperature °C (°F)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Correction Factor	1.3	1.2	1.0	1.0	0.9

Humidity : Humidity correction is not required.

Pressure : Pressure correction is not required.

MEASUREMENT PROCEDURE :

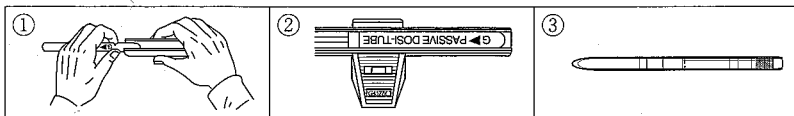

1. Break the tube at the score of the tube with Gastec Passive Dosi-Tube Holder No. 710.
2. Set the Dosi-tube in the Tube Holder firmly inside the holder so the broken part is not appeared from the edge of the holder. Record the measurement starting time on the peel off numbered label in each box of the tube and put the label on the tube.
3. For personal sampling, put the dosi-tube holder to the shirt collar of the personnel or workplace where the measurement is required. When the sampling is finished, record the time on the label of the tube.
4. Average gas concentration can be obtained from an hour sampling. 4 - 10 hours sampling term is recommended. Calculate actual sampling time and obtain the average gas concentration can be obtained by the following formula :

$$\text{Average Concentration} = \frac{\text{Dosi-Tube Reading (\% hour)}}{\text{Actual Sampling Time (hour)}}$$

5. To protect the tube holder of shirt collar from dropping during operation, support the tube holder with string through a small hole of the tube holder.

INTERFERENCES :

Substance	Concentration	Interference	Change color by itself
Ammonia	500 ppm or lower	No effect	No discoloration up to 500ppm
Hydrogen chloride	500 ppm or lower	No effect	No discoloration up to 500ppm
Chlorine	10 ppm or lower	No effect	No discoloration up to 5ppm
Hydrogen cyanide	50 ppm or lower	No effect	No discoloration up to 30ppm
Sulfur dioxide	15 ppm or lower	No effect	No discoloration up to 15ppm
Nitrogen dioxide	10 ppm or lower	No effect	No discoloration up to 10ppm
Hydrogen sulfide	50 ppm or lower	No effect	No discoloration up to 30ppm

DANGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (1999) : 5000 ppm (7 - 8 hours)

DISPOSAL INSTRUCTION :

Reagent of the tube does not use toxic substances. On disposing the tube regardless of whether used or unused, follow the rules and regulations of the local government.

WARRANTY :

If you have any questions regarding gas detection and quality of the tubes, please feel free to contact your Gstec representatives.

Manufacturer : Gastec Corporation
6431 Fukaya, Ayase-City, 252-1103, Japan

IM012DE1
Printed in Japan
00A1Z